

AP SMART CONTROLLER

WARNING

- *Disconnect power to the installation locations before installing the fan and controller!*


1. VFD WIRING (CONTROLLER)

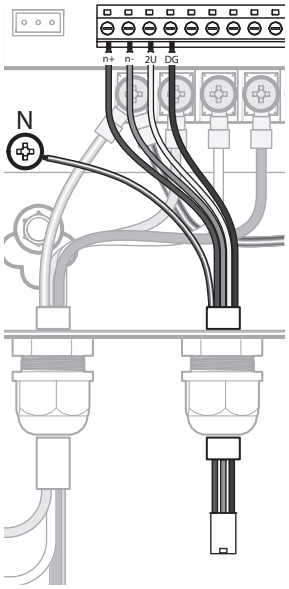


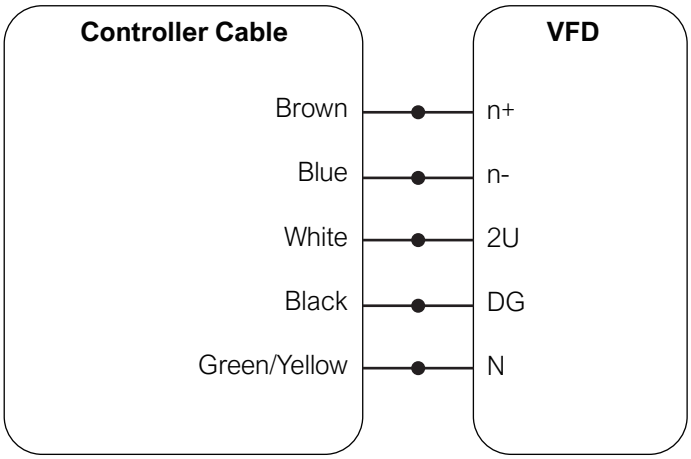

2. AP SMART CONTROLLER


After installation, turn on the power and test for proper operation.

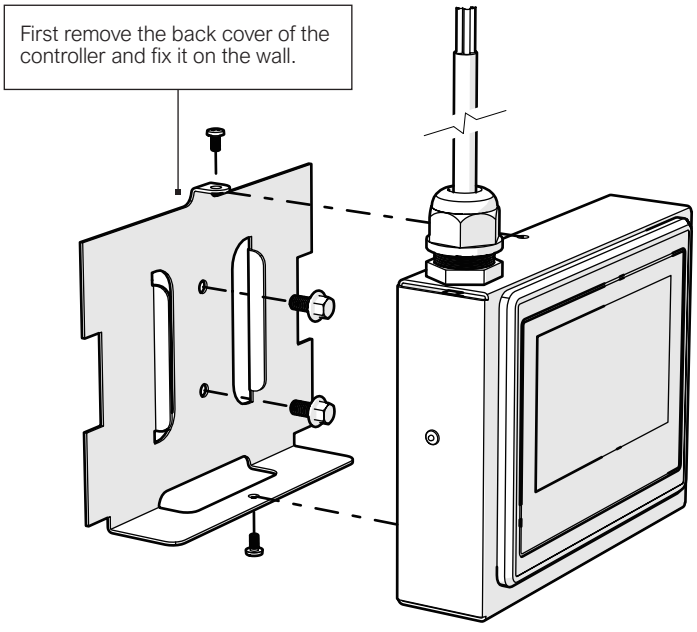

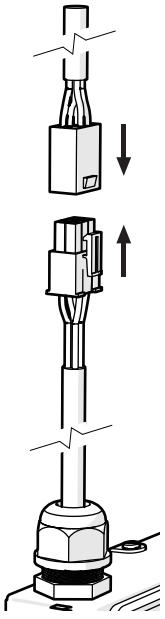

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.

FRONT PAGE

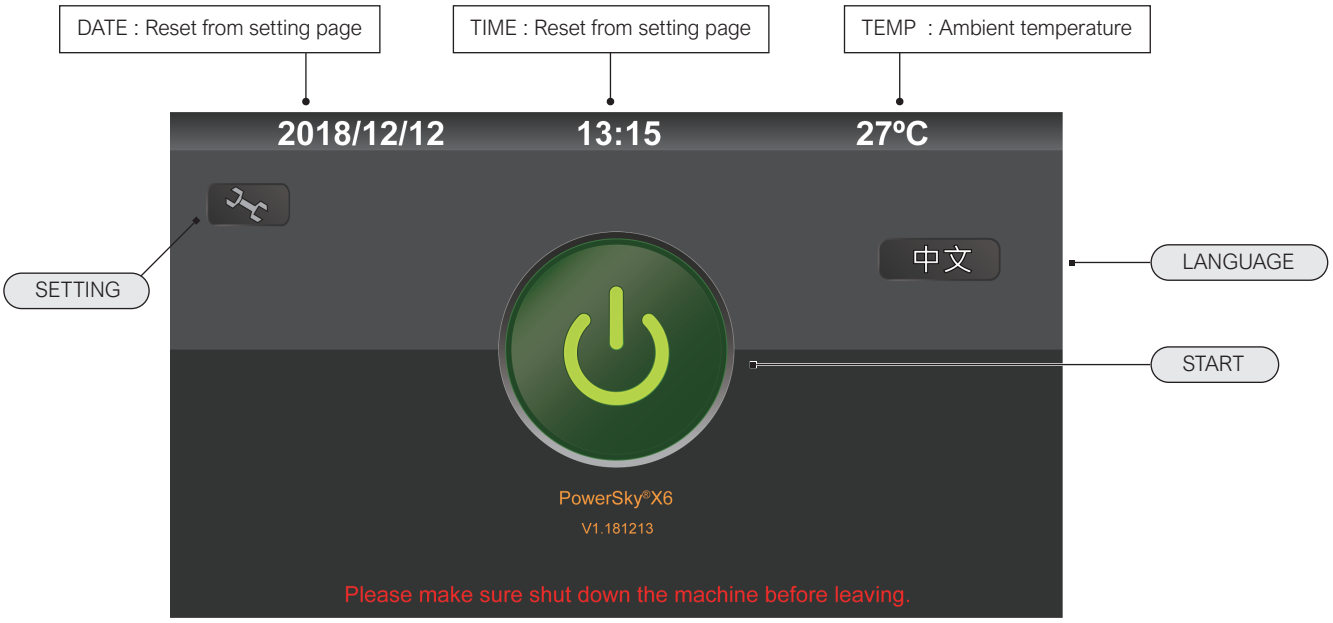

SETTING : Touch to enter the settings page.
LANGUAGE : Touch to change CHINESE / ENGLISH.
START : Touch to enter the manual mode and run.

MANUAL MODE

When enter the manual mode page, the fan will start running.



SPEED : Setting operation R.P.M
RUNNING HOUR : Setting operation time
When “00 HR”, it won’t stop automatically.
OFF : Enter the front page and shout down the fan.
ON : Operation by manual
AUTO : Change to the auto page and operation automatically.

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.

FRONT PAGE

When enter the auto mode page, the fan will start running according to setting. If the fan is running, the fan icon in the middle will rotate.



AUTO RUN : Setting power on time and power off time.
Touch the number(hour or minute) for three seconds, ▲▼ will turn orange.
Wait for three seconds after completing the setting, ▲▼ turns white and the setting is completed.

SPEED CHANGE : Automatically slow down according to settings.
The temperature setting will automatically default three seconds after opening this page and operating it.
When the fan speed is reduced, it will be reduced according to this setting.

HIGHEST SPEED : Limitation of fan maximum speed during automatic operation.
The highest speed can be adjusted at any time while the fan is running.
When the fan speed is reduced, it will be reduced from this setting.


OFF : Enter the front page and shout down the fan.

ON : Change to the manual operation page and operation by manual.

AUTO : Operation automatically by setting.

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.

SETTING PAGE

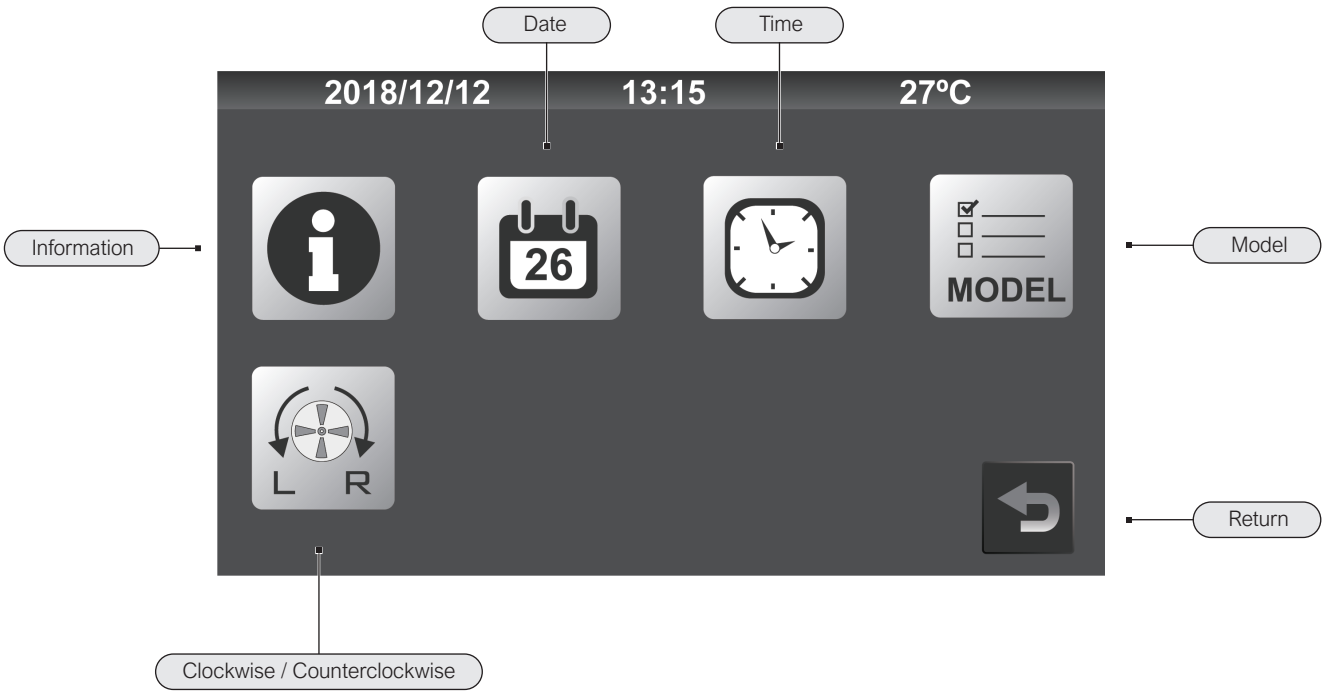


Information : Product Information.
Date : Set product date.
Time : Set product time.
Model : Select matching product's setting data (Engineers only).
Clockwise / Counterclockwise : Set the fan blade rotation to provide air supply function or air mixing function.
Return : Return to front page.

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.


DATE

Adjust to the correct date and touch "confirm" to complete the setting, or touch "Cancel" to return to the setting page.

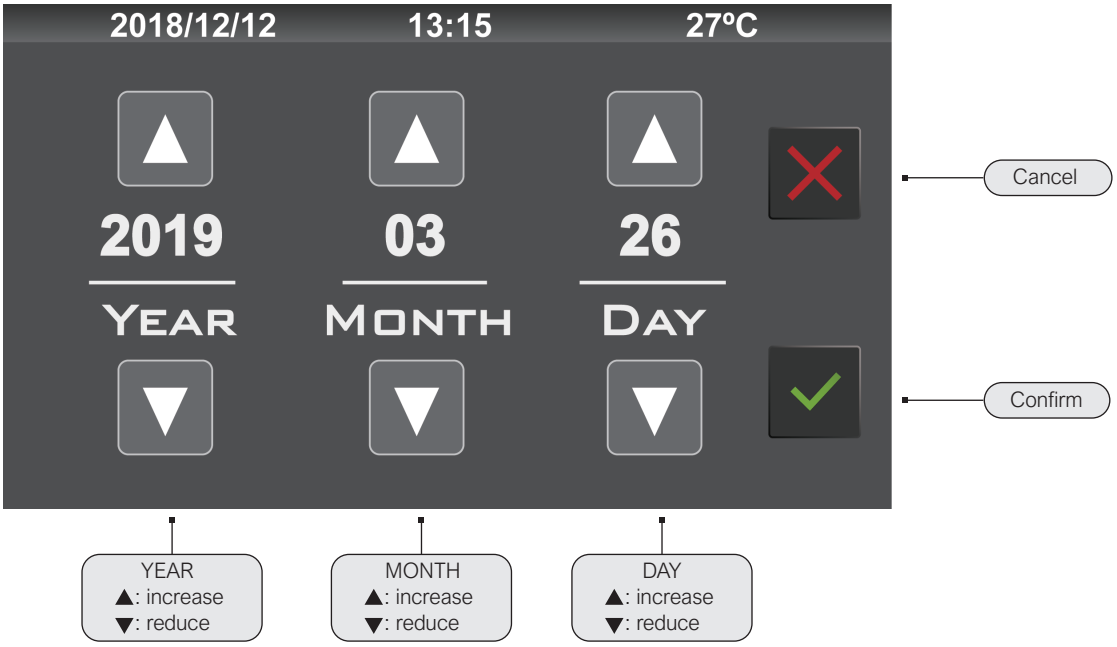

TIME


Adjust to the correct minute and touch "confirm" to complete the setting, or touch "Cancel" to return to the setting page.

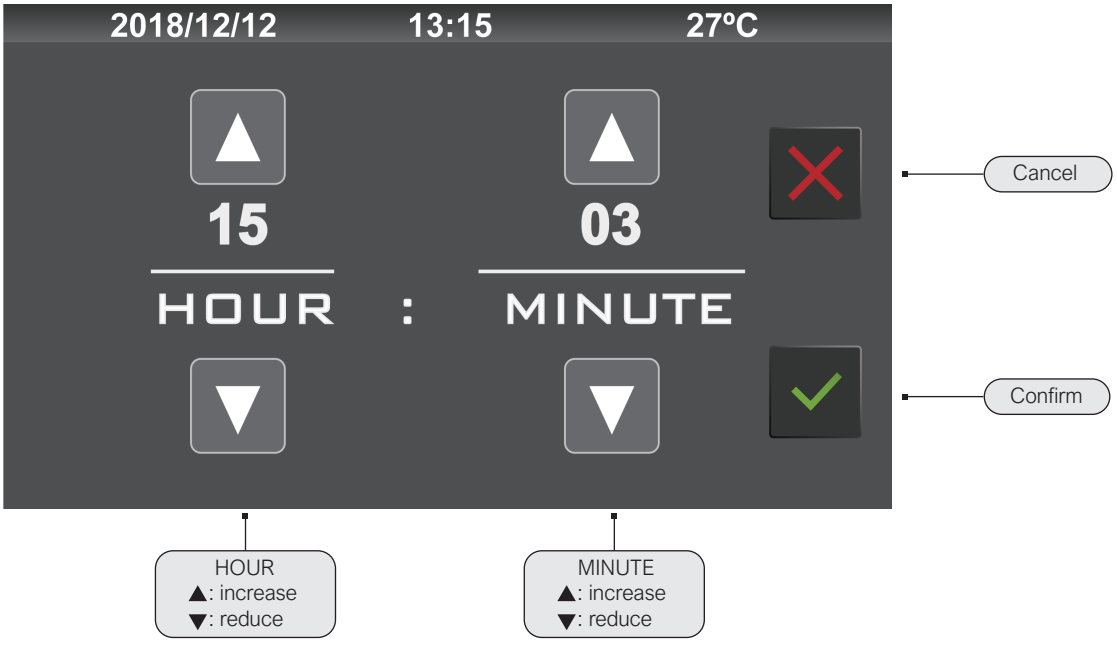

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.

CLOCKWISE / COUNTERCLOCKWISE

Select the direction of the fan blades and wait for the system to be successfully copied.
Touch "confirm" to complete the setting and return to the setting page.
Or touch "Cancel" to return the setting page.

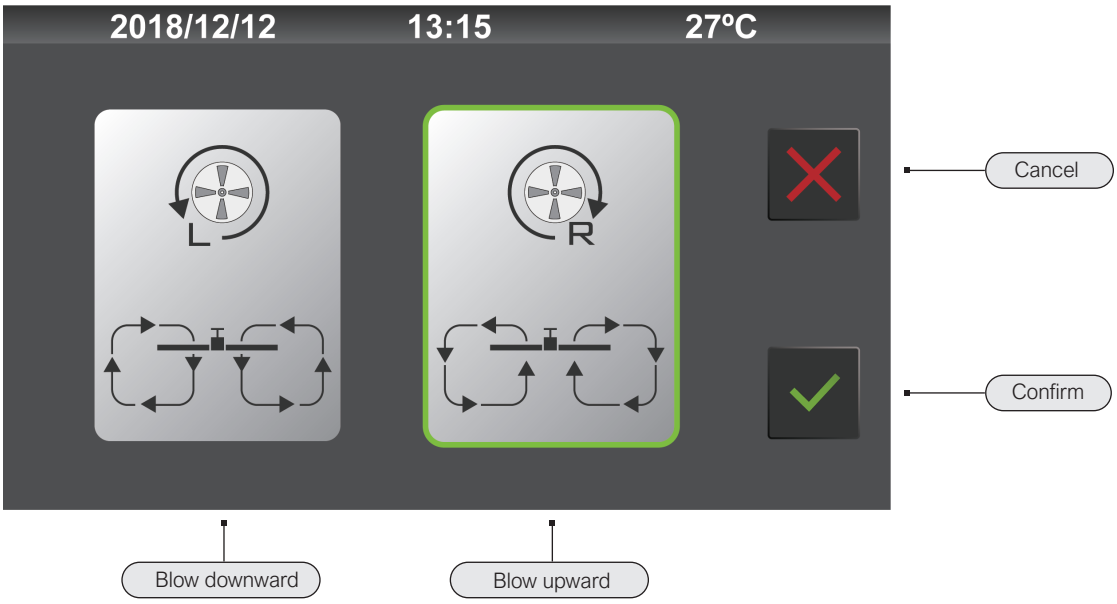





⚠ *When the screen direction is different from the actual operation, it means there is a problem with the motor wiring.*

WWW.AEROPOWER-FAN.COM.TW© 2023 ALL RIGHTS RESERVED.